

[E121] Fuse

Replace the indicated fuse. The new fuse must have the same properties as that we removed.

